

Case removal is done as follows:

1. Put the machine in its normal operating position.
2. If possible move the carriage a few positions to the right.
3. From the bottom unscrew either the screws at the yellow or at the orange arrows.
If the "yellow" screws are loosened the rubber feet as well as the bottom cover will come with the machine. Deteriorated feet may hinder taking out the machine. If the "orange" screws are loosened the bottom cover remains with the case.
4. Grab the machine carriage on both sides and carefully lift it from its casing.

Putting the machine back in place is done in reverse order.

