

To ease cleaning the carriage can be opened as follows:

- Remove screw (1) on both sides of the carriage
- These screws fixate a metal strip. Turn this strip a bit.
- Then it becomes possible to remove the steel pin at (2)
- Now remove the steel pin as well as the metal strip at (3)

After following these steps the carriage can be opened.

